
# Wilfrid Slab

## SPECIFIC DETAILS

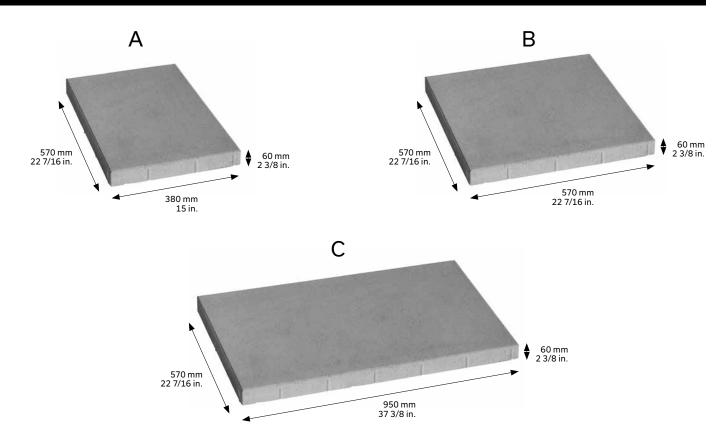


## INSTALLATION OF SLABS

With its three sizes, the Wilfrid slab can be installed in a linear or modular pattern. It is recommended to use all units of every row to prevent waste when installing the Wilfrid Slab.

- > The unit ratio per layer is 1:1:1
- > The length of units A and B together equals the length of unit C
- > Unit A represents 1/3 and unit B represents 2/3 of the length of unit C

CAUTION! The unit ratio per layer of Wilfrid slab is not the same as the one of Melville 60 slab. The laying patterns for the Wilfrid slab are different.

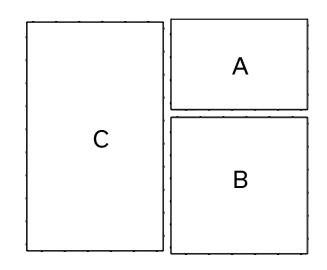

## WILFRID SLAB

## LAYING PATTERNS

### LINEAR LAYING PATTERN

This is only a preview of a linear laying pattern. Replication of this exact pattern may result in a waste of units.

Τ													
	В	A		С		E	B	A		С			
	A	В		С		A	A	В		С			
	С			В	A		С			В	B A		
	В			C A			В			С			
	В	A		С		E	ВА			С			
	Α	В		С		A	A	В		С			
	С			В	A			С	•	B		1	

#### MODULAR LAYING PATTERN

This is only a preview of a modular laying pattern. Replication of this exact pattern may result in a waste of units.

